
## **Offices**

## Armotek roof

construction manual

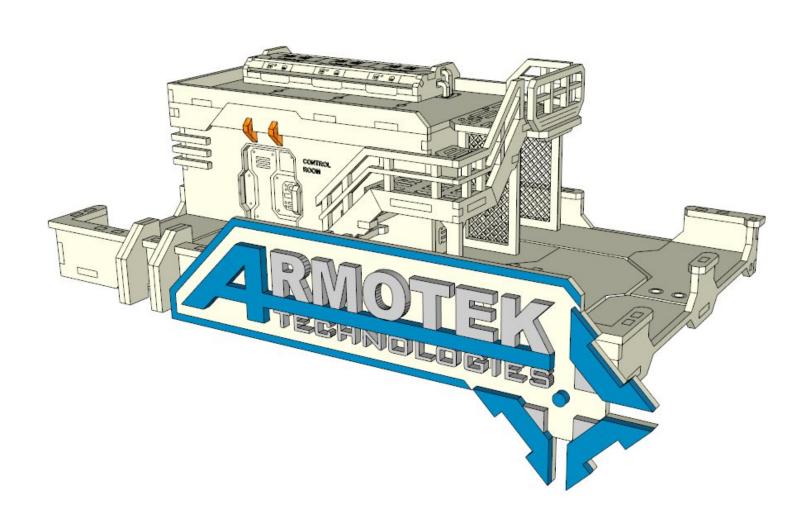





Material: methacrylate, HDF


Remove the protection cover from details before construction.


We recommend to use the SuperGlue or its equivalents. Degrease all surfaces before painting. If you have any questions write us - store@losblock.com


Small parts. Not recommended for children under 6 years. Real object can slightly differ from presented in this manual.

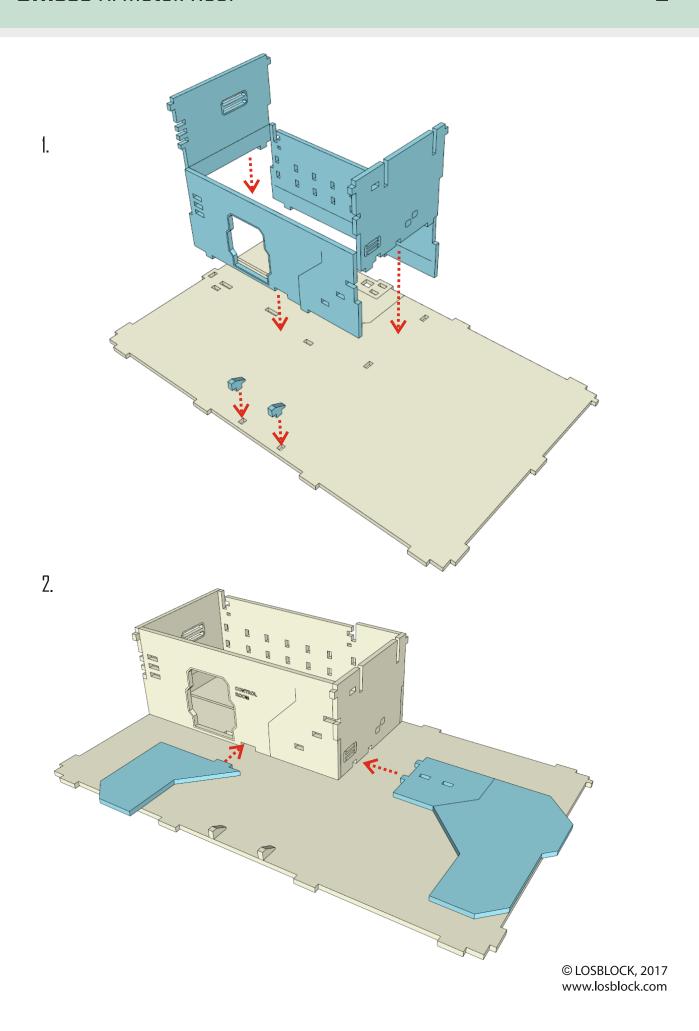


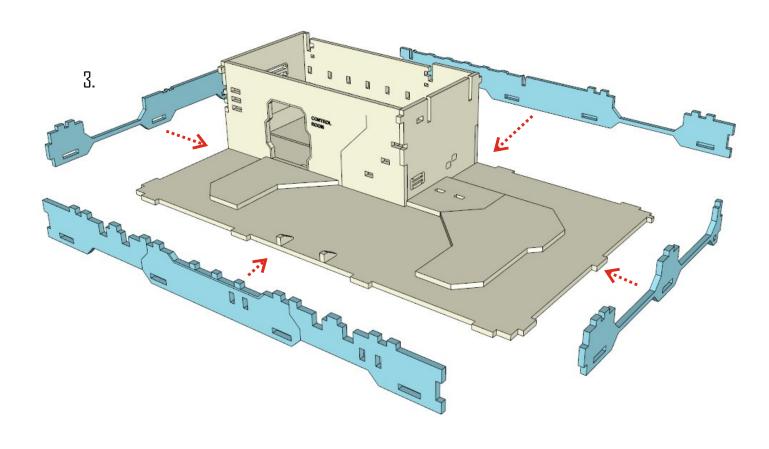


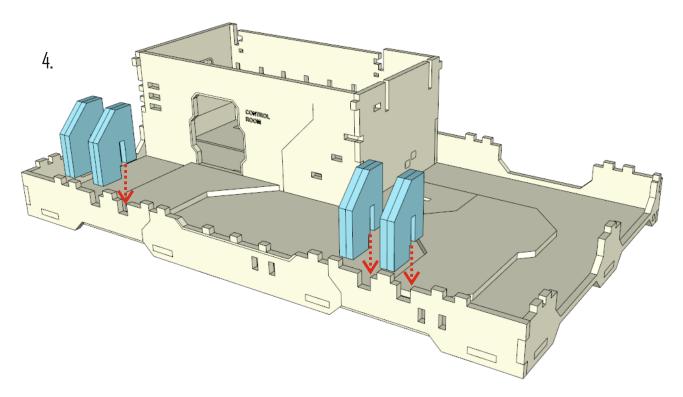


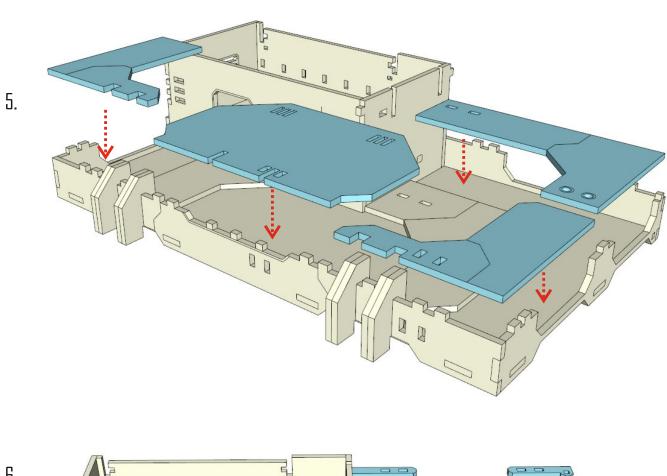


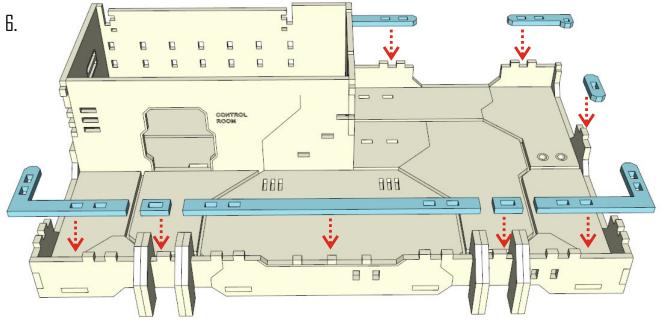


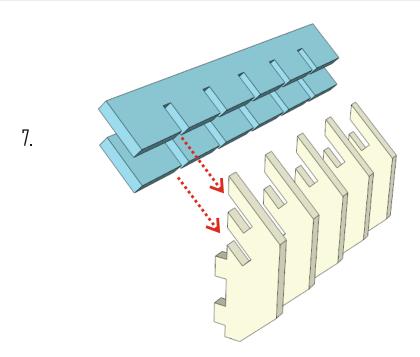


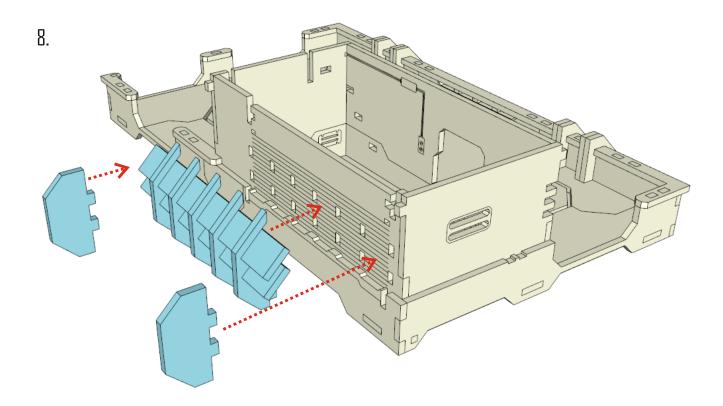

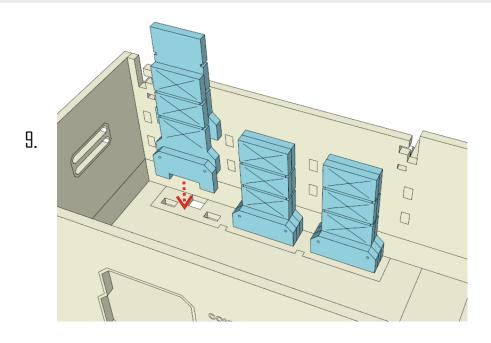

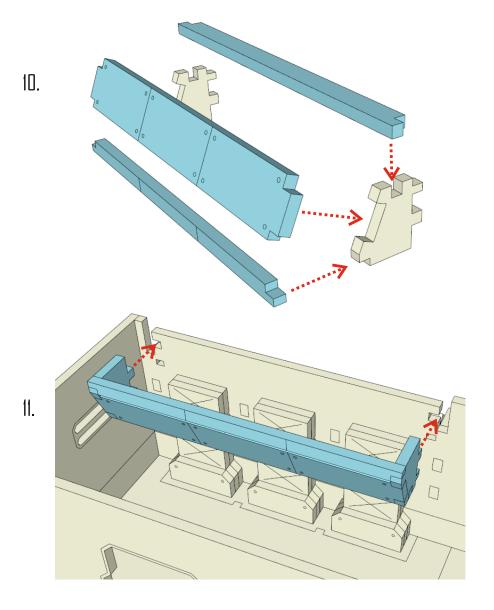


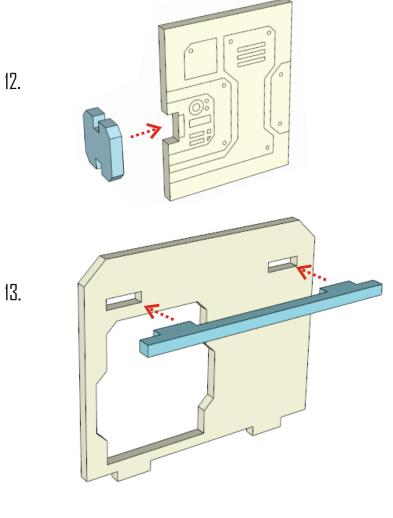

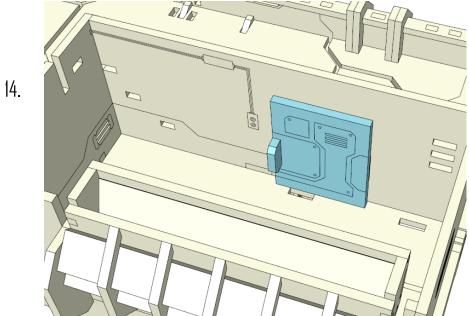






Place doors in the apertures without glue.

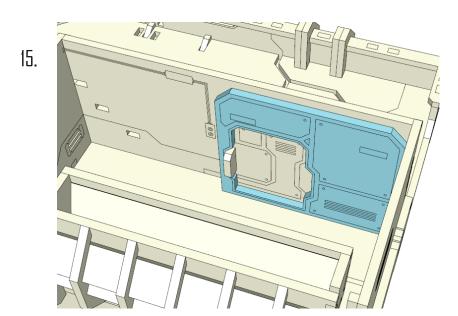


- We are recommend to glue this parts after painting.
- Be sure that doors are moving freely.

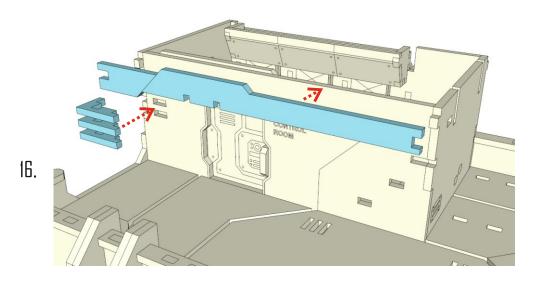


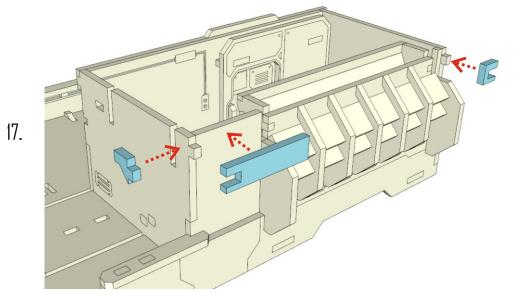


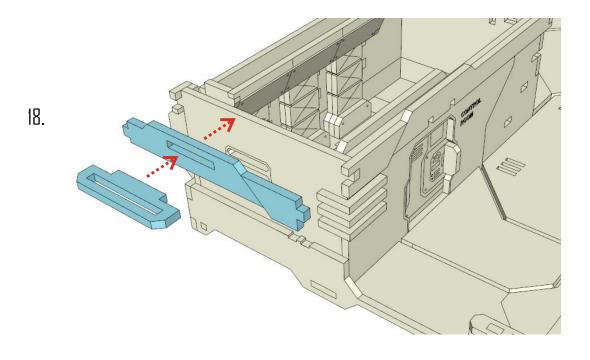

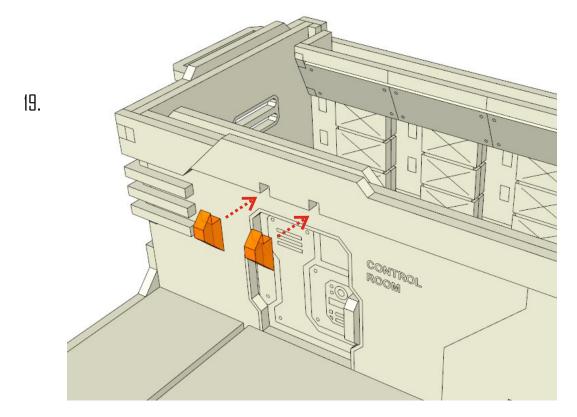



We are recommend to glue this parts after painting.

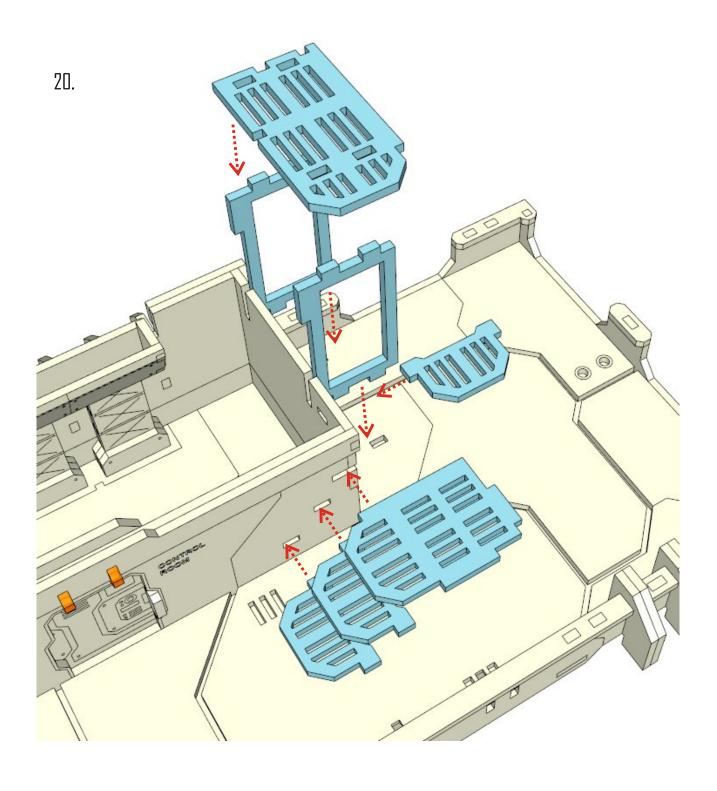


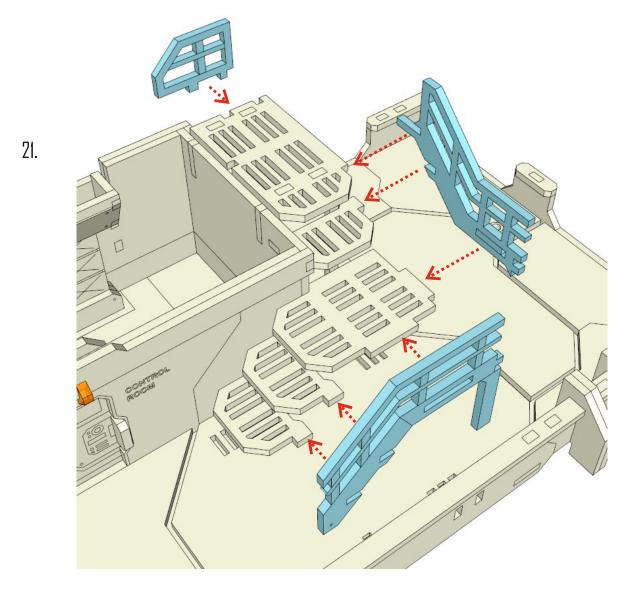



72.

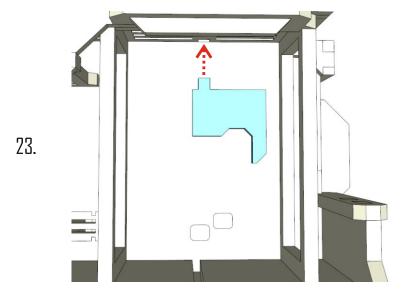


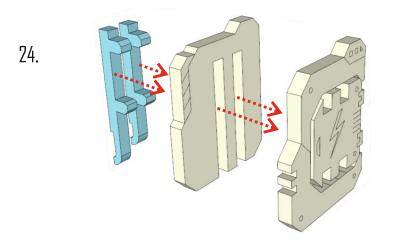


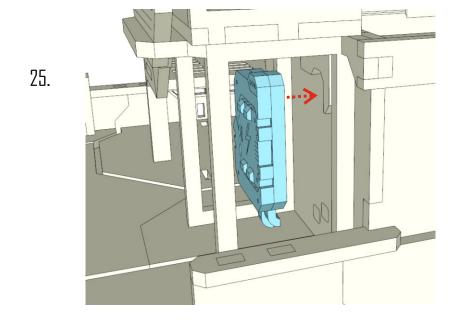


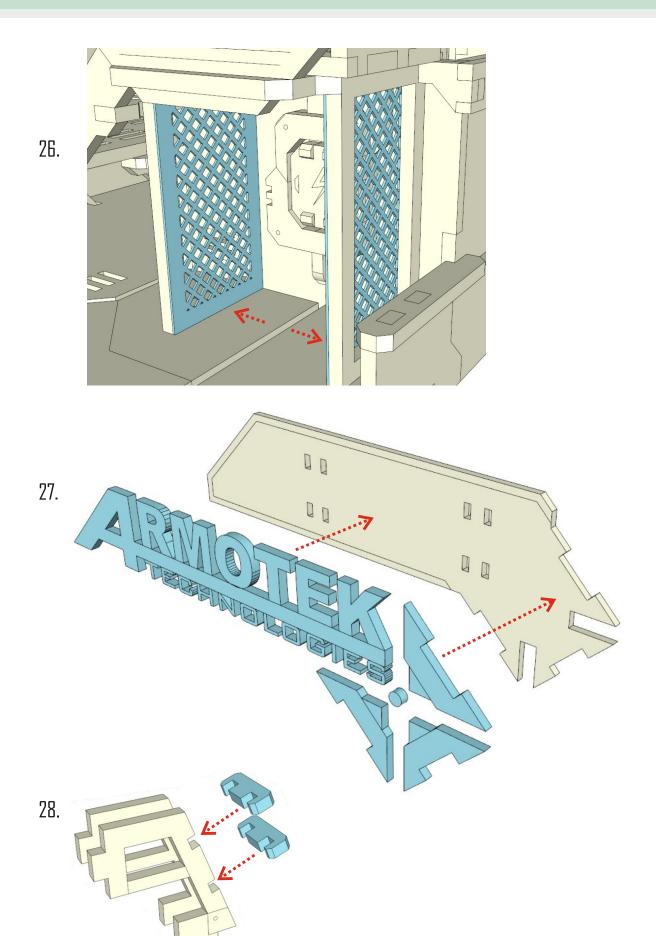


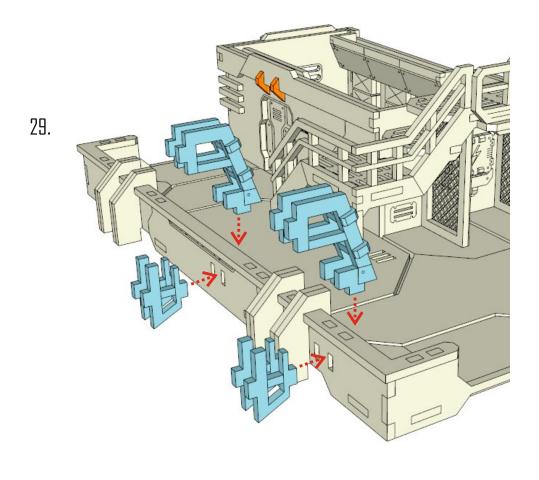


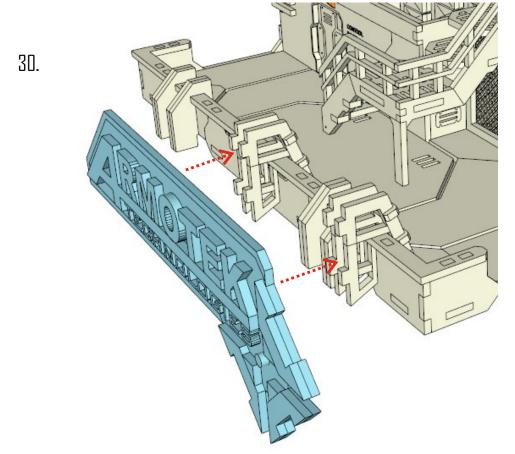

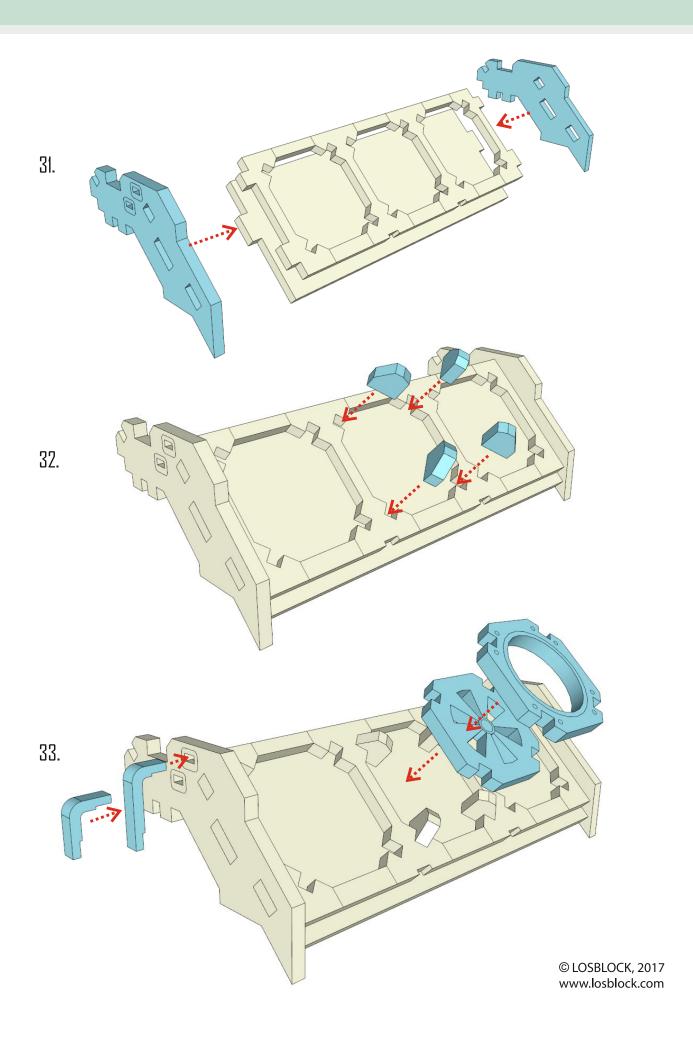


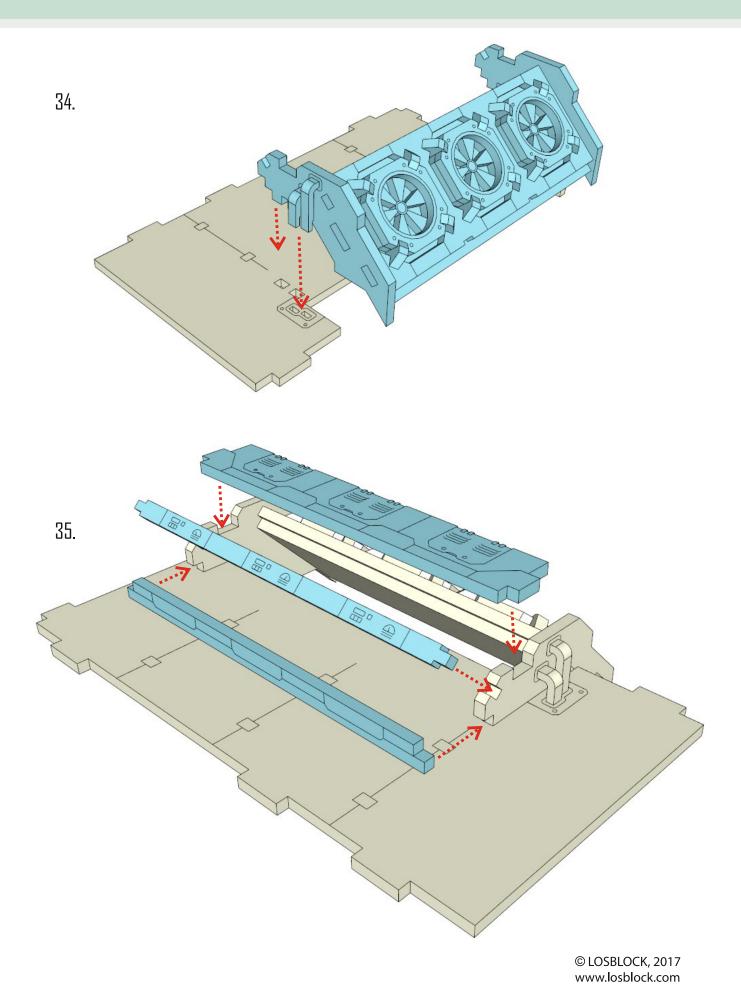


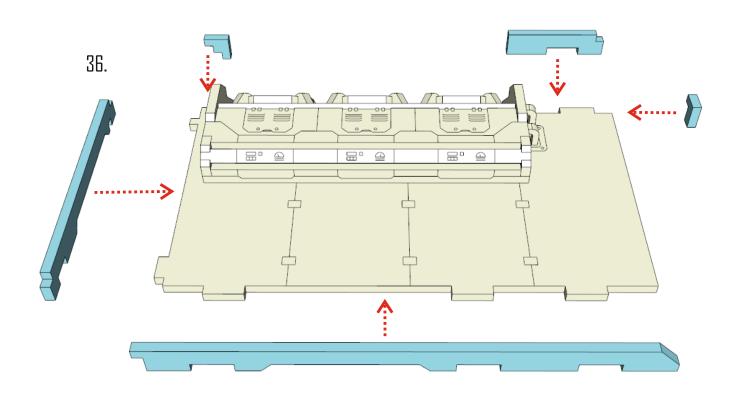

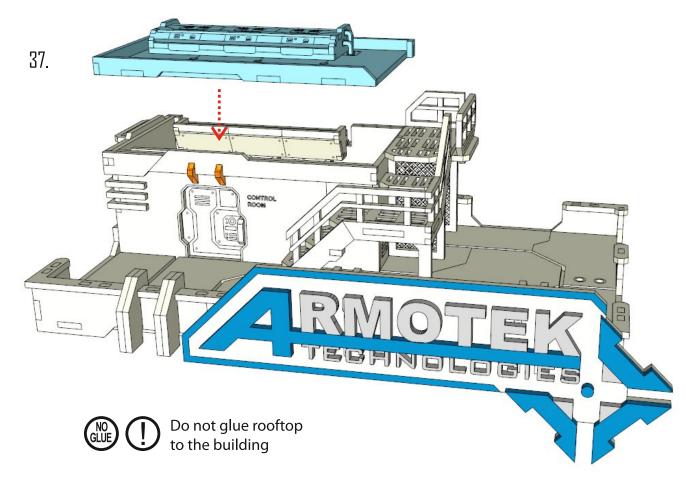

38.

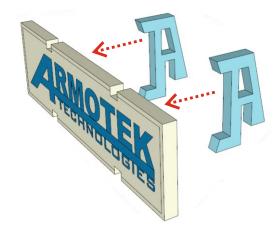

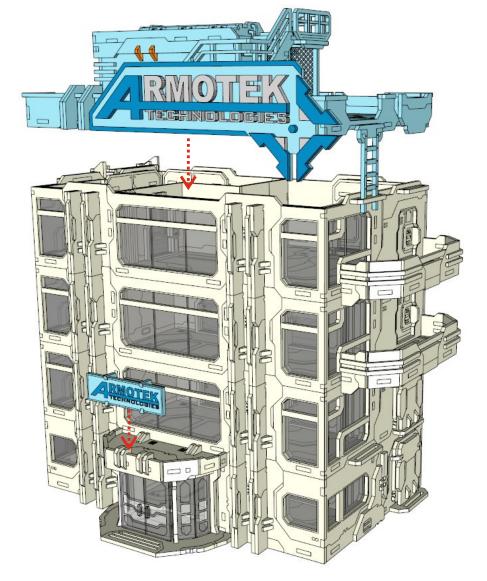

39.

